



Left side measure from left wall to the left window reveal.
 Deduct 2mm of the wall side. To allow for tolerance, add a minimum (4mm adhesive + 6mm glass) = 10mm to allow for the glass to over sail the reveal glass

Use a set square or 90 degree flat item such as a large book to get the reveal as close to 90 degrees off the window frame

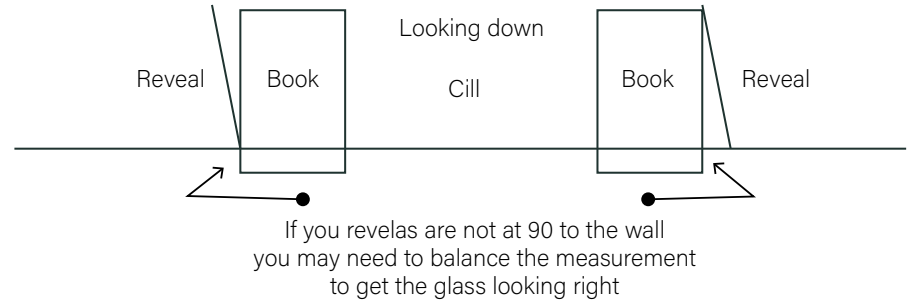

TYPICAL ARRANGEMENT FOR WINDOW WALL 2 SIDE PIECES, 2 REVEALS, UPSTAND AND A CILL

Same procedure for the right side of the window

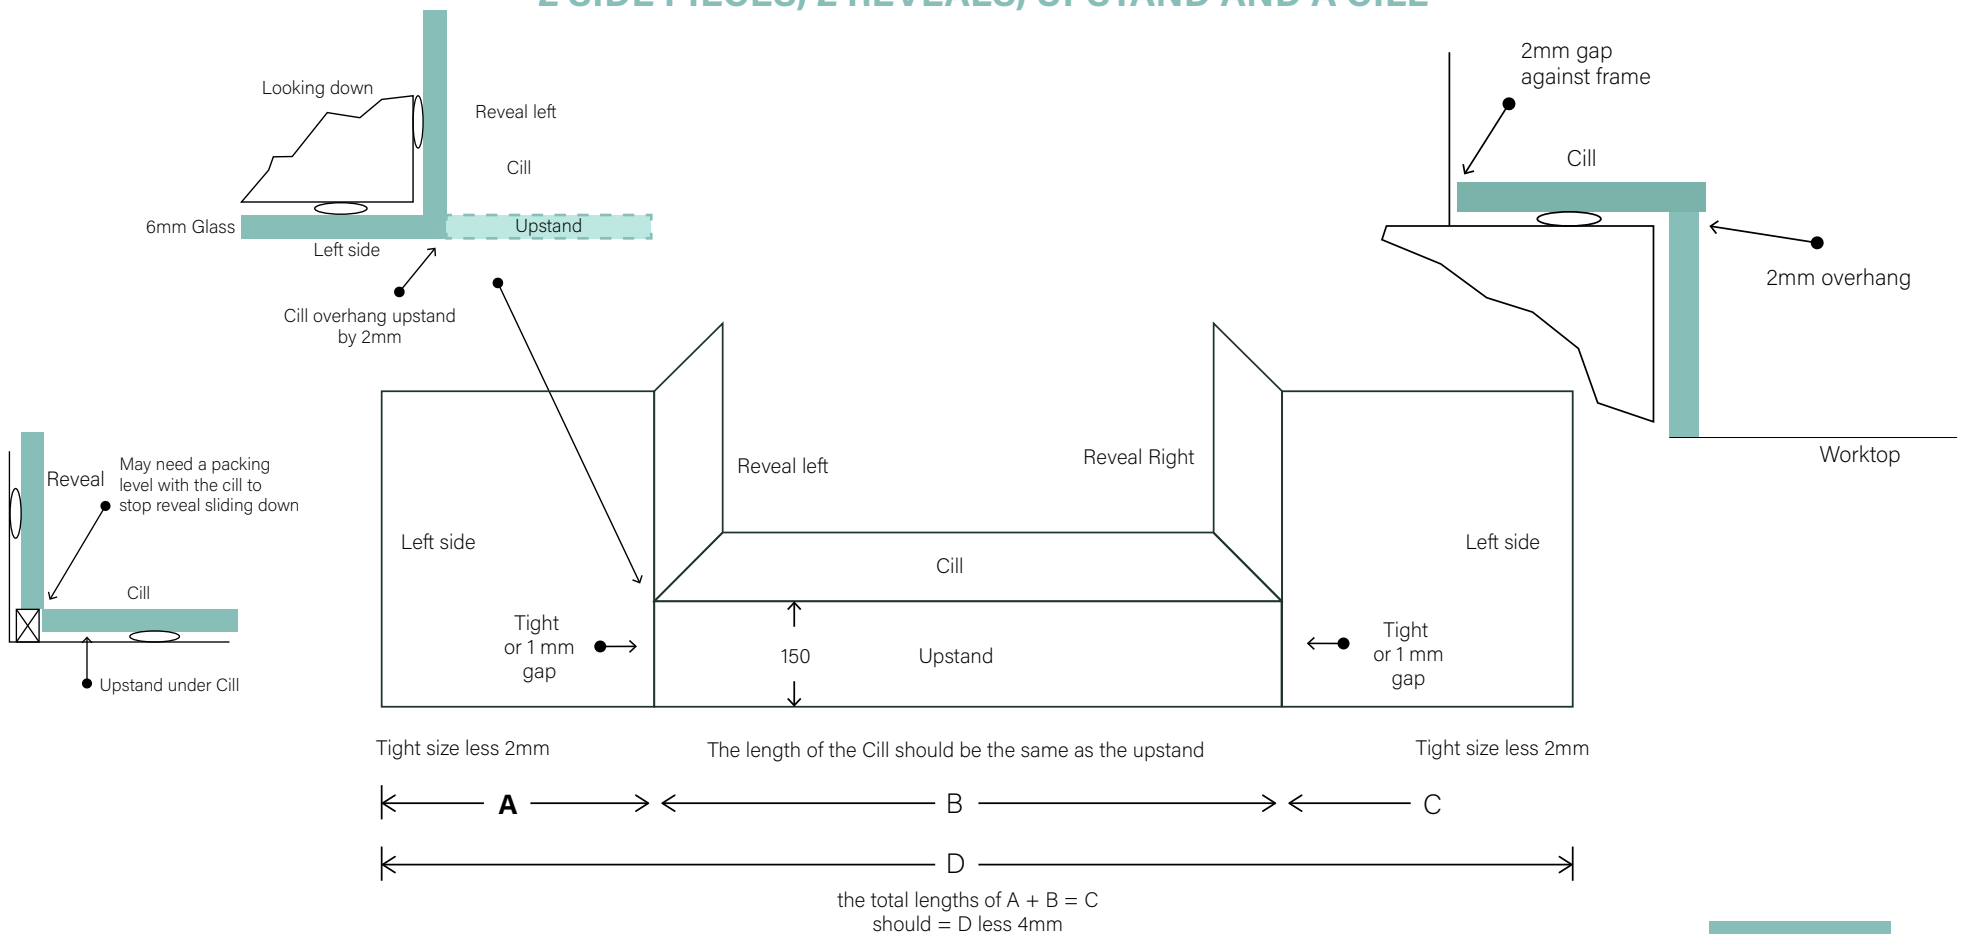

We will put these measurements into a drawing and email it back to you for checking.